 


INSTRUCTION

Industrial Hall
983234.002

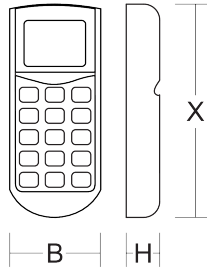

L 141, B 58, H 22



101 g



Installation erfordert
Elektro-Fachkraft!

Symbole nach ISO 7010



Allgemeine Sicherheitshinweise

- Der elektrische Anschluss muss ordnungsgemäß nach geltenden Normen und den nationalen sowie internationalen Sicherheits- und Unfallverhütungsvorschriften erfolgen.
- Beschädigte Leuchten dürfen nicht betrieben werden.
- Keine Haftung für Schäden durch unsachgemäßen Einsatz.
- Bei Instandsetzung nur Originalteile verwenden.
- Tragfähigkeit der Decke und Befestigungselemente sicherstellen.

Betrieb der Leuchte

- Die unzulässigen Umgebungstemperaturen reduzieren die Lebensdauer der Leuchte, im Extremfall droht der Frühausfall.
- Zur Vermeidung von EMV-Problemen die Durchgangsverdrahtung nicht entlang der Leuchtenverdrahtung führen.
- Steuereingänge von dimmbaren Leuchten mit handelsüblichen für Netzspannung geeigneten Leitungen anschließen.

Manipulationen unserer Produkte sind unzulässig

Veränderung, Umarbeitung, Umkennzeichnung von Produkten sowie deren Verpackung sind unzulässig und verletzen u.a. unsere eingetragenen Warenzeichenrechte. Solche Modifikationen können technische Eigenschaften unserer Produkte negativ beeinflussen, diese zerstören und möglicherweise Folgeschäden an anderen Objekten verursachen. Für durch derartige Modifikationen verursachte Schäden kann der Hersteller in keinem Fall verantwortlich gemacht werden.



Installation requires
a qualified electrician!

Symbols according
to ISO 7010



General Safety Information

- Electric connection must be appropriate according to all applicable standards and other national and international safety and accident prevention regulations.
- Damaged luminaires must not be operated.
- No liability is accepted for damages resulting from improper use.
- Use genuine parts only for repair.
- Ensure stability of the ceiling and fastening elements.

Operation of the luminaire

 
- Exceeding the permissible ambient temperature will reduce the luminaire's lifecycle, resulting in premature failure in extreme cases.
- Avoid ESD problems by not routing feed-through wiring directly along the wiring of the luminaire.
- Connect control inputs of dimmable luminaires with standard cables suitable for power supply voltage.

Manipulation of our products is not permitted

Modifications, reworking, re-labelling of products as well as their package is not permitted and infringes, amongst others, our registered trademark rights. Such modifications may affect technical properties of our products, damage them and possibly cause consequential damage to other objects. The manufacturer shall not be responsible under any circumstances for damage caused by such modifications.



DIN EN IEC 61340-5-1



Bei Fragen zu unseren Symbolen, besuchen Sie folgende Webseite:

If you have any questions about our signs, visit the following website:

https://www.rzb.de/fileadmin/assets/downloads/PDF/RZB_Symbolklaerung.pdf


HD05R Remote Control - Keys Funktion Introduction



Remote Keys	Keys Function	Keys Introduction
	ON/OFF	Switch ON/OFF the light ; switch OFF the sensor function
	MW/PIR	Mode Switch
	Reset	Switch to Sensor Mode and recover all settings to be factory defaulted setting (Detection area-100%, Hold time-5s, Daylight-Disable, Standby Period-0s, Stand-by dimming level-10%.
	Start	Press the key to start the setting of parameters with memory and apply function under the Sensor Mode. 1.Press „Start“, there will be a letter “S” flashes in the lower left corner of the display, then start to set all parameters. 2.After setting all parameters, press „Memory“ to store the settings and keep it until the next reset. 3.Press “Apply” to the set sensor with stored settings within the remote IR range. 4. Note: All data shown in the display are the settings after pressing “Memory”
	Memory	
	Apply	
	Detection area	Under Sensor Mode, press the key, the corresponding icon on the display flashes, press “+/-” to select sensitivity.
	Hold time	Under Sensor Mode, press the key, the corresponding icon on the display flashes, press “+/-” to select the hold time.
	Daylight threshold	Under Sensor Mode, press the key, the corresponding icon on the display flashes, press “+/-” to select the daylight threshold.
	Stand-by period	Under Sensor Mode, press the key, the corresponding icon on the display flashes, press “+/-” to select the low brightness time.
	Stand-by dimming level	Under Sensor Mode, press the key, the corresponding icon on the display flashes, press “+/-” to select the low brightness during stand-by period.
	UP	After pressing different parameter keys, press either of the key to adjust (UP/DOWN) the required parameters.
	DOWN	
	POWER	Under Sensor Mode, press “POWER“, the letter of “PW” flashes in the middle of the display, press “+/-” to increase/decrease the output power.
	Test Mode	Press the key to enter the Test Mode under Sensor Mode. It won't be memorized after power OFF. The parameters under Test Mode is: detection area-100%, hold time-2s, daylight-disable, stand-by period-0s, stand-by dimming level-10%.

Notes: Press “Scene” to reset the remote before using. During the setting of each parameter, the icon flash for 5s, after that, the setting will be kept automatically.

 HD05R Remote Control Procedure

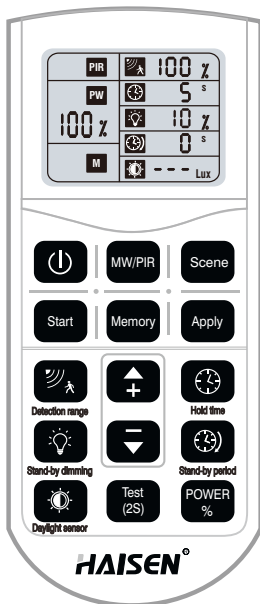

1. Microwave motion sensor settings - one sensor

- ① Step 1 - Press „ON/OFF“ to turn on the light
- ② Step 2 - Press „Scene“ to reset the remote and switch to sensor mode
- ③ Step 3 - Press related keys to set Detection Area, hold Time, daylight threshold, stand-by period and stand-by dimming level with pressing „+/-“ within 5s when the icon start to flash.
- ④ Then all settings would be kept automatically until the next reset.

 
 
 
 
 
2. Start / Memory / Apply-Applied to more sensor

- ① Press „ON/OFF“ to turn on the light
- ② Press „Scene“ to enter sensor mode. The press „Start“ to start the user-defined setting.
- ③ Press related keys to set Detection Area, Hold Time, daylight threshold, stand-by period and stand-by dimming level with pressing „+/-“ within 5s when the icon start to flash.
- ④ Press „Memory“ to store the setting.
- ⑤ Press „Apply“ to all sensor within remote IR range, the light will blink rapidly when receiving the signal, means the sensor has been set successfully.

2. Power Output Setting

- ① The output could be set under two mode - Sensor Mode - Always ON Mode.
- ② Under Always ON Mode, press „+/-“ to adjust the output from 10- 100%.
- ③ Under the Sensor Mode, press „Scene“ - „Power“, then press „+/-“ to adjust the output from 60-100%.

Note: Under the Sensor Mode, the data shown in the display could be set from 10-100%, but the brightness would be 60% at lowest and won't dim any more.

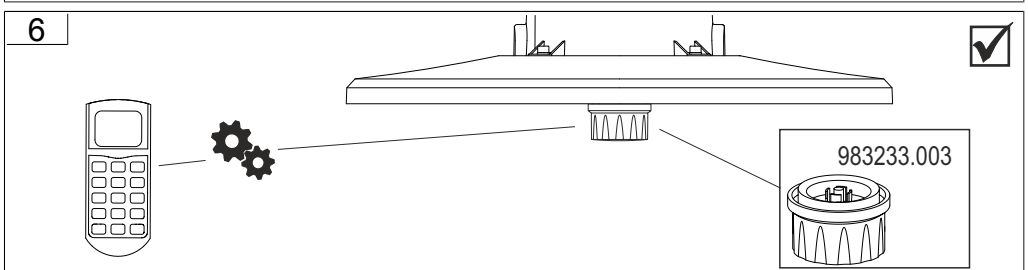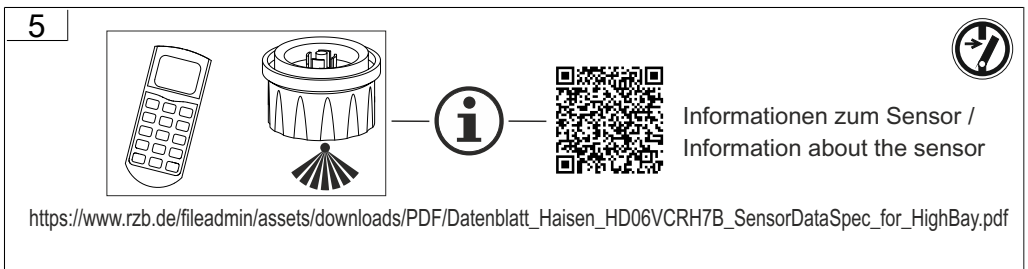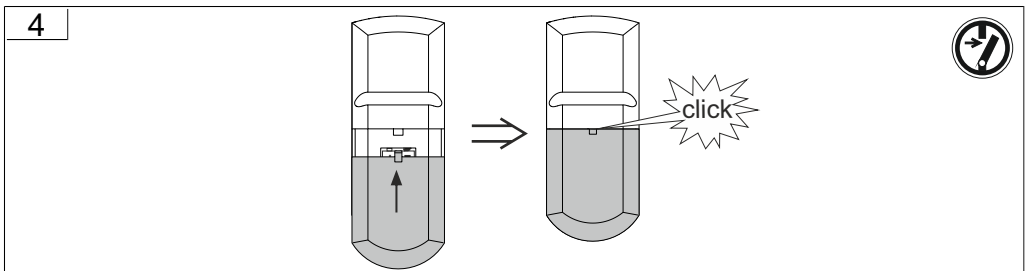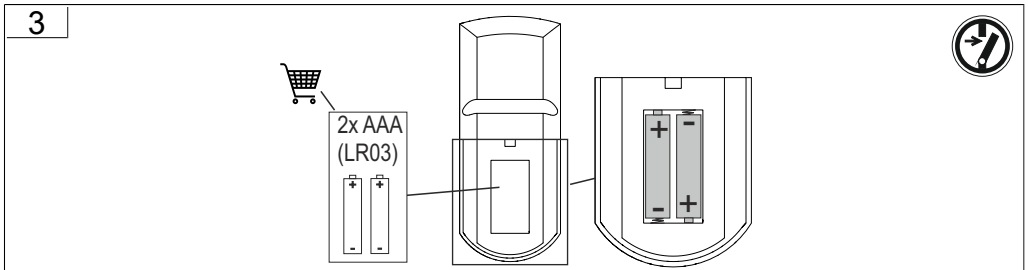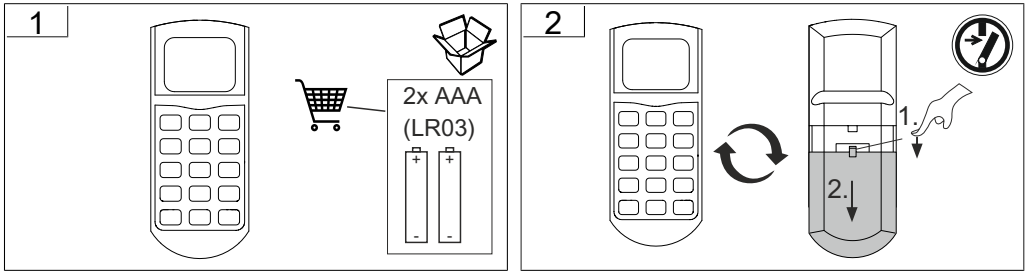



RZB - Rudolf Zimmermann, Bamberg GmbH

 Rheinstraße 16, 96052 Bamberg

 0951/7909-0

 0951/7909-198

 info@rzb-leuchten.de